

SUMMIT APPLIANCE

Felix Storch, Inc.
770 Garrison Avenue
Bronx, NY 10474

SCUR 18/20/25

Summit Frost Free Refrigerator

Table of Contents

Refrigerator Safety	Page 2
Safety Instructions	
Proper Disposal of Your Old Freezer	
Installation Instructions	Page 3
Key Eject Lock	
Location Requirements	Page 4
Adjusting the Door	Page 5
Refrigerator Use	
Digital Thermostat Instructions	Page 6
Refrigerator Care	Page 6-8
Cleaning your frost-free refrigerator	
Base Grill	
Changing the light bulb	
Loss of Power	
Moving Care	
Troubleshooting	Page 8-10
Service and Warranty	Page 11-12

If you need service or call with a question, have this information ready. We advise you to keep this Owners Manual in your possession.

MODEL: _____

SERIAL NUMBER: _____

DATE OF PURCHASE: _____

REFRIGERATOR SAFETY

Your safety and the safety of others are very important to us.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury when using your refrigerator, follow these basic precautions:

- Plug into a grounded 3 prong outlet.
- Do not remove ground prong.
- Do not use an adapter.
- Do not use an extension cord.
- Disconnect power before servicing.
- After servicing, replace all parts and panels before operating.
- Use nonflammable cleaner.
- Keep flammable materials and vapors, such as gasoline, away from refrigerator.
- Use two or more people to move and install refrigerator.
- Remove doors or lid from your old refrigerator.

[SUFFOCATION HAZARD]

Proper Disposal of Your Old Refrigerator

Suffocation Hazard

Remove doors from your old refrigerator.

Leave shelves in place.

INSTALLATION INSTRUCTIONS***Excessive Weight Hazard***

Use two or more people to move and install refrigerator.

Failure to do so can result in back or other injury.

1. Remove Packaging Materials
2. Remove tape and glue residue from surfaces before turning on the refrigerator. Rub a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.
3. Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your refrigerator. For more information, see "Refrigerator Safety."
4. When Moving Your Refrigerator:
Your refrigerator is heavy. When moving the refrigerator for cleaning or service, be sure to protect the floor. Always pull the refrigerator straight out when moving it. Do not wiggle or "walk" the refrigerator when trying to move it, because floor damage can occur.

5. Clean Before Using

After you remove all of the packaging materials, clean the inside of your refrigerator before using it. See the cleaning instructions in "Refrigerator Care."

Key Eject Lock

To lock or unlock the refrigerator, you must hold the key in the lock while turning. The lock is spring loaded, so the key cannot be left in the lock.

If the key is lost, contact your dealer for a replacement. Always give the model and serial number of your freezer when requesting a replacement key.

LOCATION REQUIREMENTS

Explosion Hazard

Keep flammable materials and vapors, such as gasoline, away from refrigerator.

Failure to do so can result in death, explosion, or fire.

IMPORTANT: Do not install the refrigerator near an oven, radiator, or other heat source, nor in a location where the temperature will fall below 40°F (5°C).

Check the strength of the floor before installing your refrigerator. It should hold the weight of a fully loaded refrigerator. Allow at least 3" (7.5 cm) of airspace at the top and on both sides of the refrigerator and 1" (2.5 cm) between the back of the refrigerator and the wall. If the refrigerator is going to be placed against a wall, leave extra space on the hinge side so the door can open wider than its width.

NOTE: This refrigerator may be installed side by side with another refrigerator or freezer. Allow for a 3' (7.5 cm) clearance at the top and sides and a ¼" (0.64 cm) clearance between the appliances.

Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Recommended grounding method

A 115 Volt, 60 Hz. AC only 15- or 20- amp fused or circuit breaker, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use outlets that cannot be turned off by a switch or pull chain. Do not use an extension cord.