

2. THERMOSTAT CONTROL

The temperature of the freezer is automatically controlled by the thermostat setting. The thermostat is preset at the factory for normal use.

If you require a colder temperature within the freezer, turn the thermostat knob to a higher number (clockwise).

If you require a warmer temperature within the freezer, turn the thermostat knob to a lower number (counter clockwise).

3. DEFROSTING

For the most efficient operation of the freezer with the minimum electricity consumption, please keep the freezer clear of frost. The frost should be removed as often as possible using a plastic ice scraper. The resulting “snow” should be removed from the cabinet. This procedure will allow uninterrupted use of the freezer.

If the layer of frost exceeds $\frac{1}{4}$ inch, we recommend that you completely defrost the freezer by following this procedure:

- A. Remove all products from the freezer
- B. Open the lid(s) and disconnect the plug.
- C. Remove as much frost as possible with a plastic ice scraper.
- D. Dry the interior entirely with soft cloth.
- E. Reconnect the plug before placing product back in.

CAUTION: DO NOT ATTEMPT TO SCRAPE OR PRY FROST AWAY WITH SHARP OBJECTS.

4. MAINTENANCE AND CLEANING

It is recommended that the freezer be cleaned occasionally.

Freezer body – Clean with a dry cloth. If there are any stubborn stains use hot water, if necessary, with a mild detergent. Rinse well and dry.

Inner walls – Defrost as recommended in the previous page. Clean with warm water. Do not use corrosive detergents.


5. LONG TERM STORAGE

If the freezer is to be kept idle for extended periods of time please follow the following procedure:

- A. Remove plug from outlet.
- B. Defrost and clean the freezer thoroughly.
- C. Leave lids in open position to avoid formations of condensation, mold or odors.

THANK YOU FOR HAVING READ THE
INSTRUCTIONS WHICH WE HOPE YOU WILL
FOLLOW CAREFULLY.

WIRING DIAGRAM

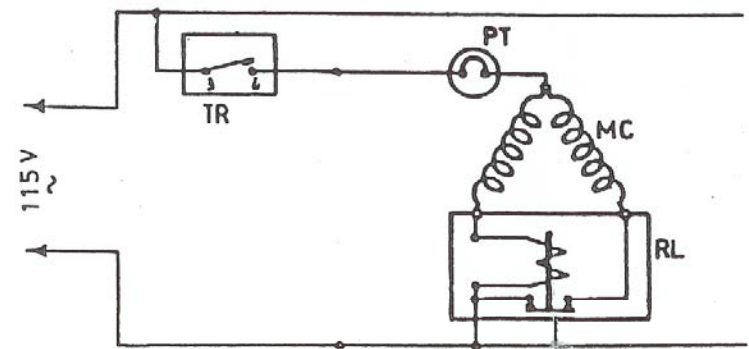

TR = THERMOSTAT

PT = OVERLOAD

MC = COMPRESSOR

RL = RELAY

Thanks for having chosen one of our products. You have certainly made a good investment and we are sure that our appliance will prove this to you. Make sure it operates under its best conditions by complying with the enclosed instructions.

FELIX STORCH INC.

GENERAL INSTRUCTIONS

Our appliance has been carefully designed to give the best possible performance.

1. INSTALLATION

- A. Please install the freezer in an area which is level, dry, well ventilated and away from sunlight and heat sources such as stoves, heaters, etc.
- B. For better ventilation around the back and bottom of the freezer there should be free clearance of at least 2-3 inches on all sides.
- C. The voltage from the outlet must correspond to that indicated on the back plate of the freezer. A tolerance of 10% is acceptable.
- D. Let the unit run for several hours before placing any products in it.

**FELIX STORCH, INC.
SUMMIT APPLIANCE DIVISION®**

INSTRUCTION MANUAL FOR MODEL:

FCL-44



WARNING! This product may contain chemicals known to the state of California to cause cancer or birth defects or other reproductive harm. For more information, visit: www.summitappliance.com/prop65

Chemicals known by the manufacturer to be present in this product in concentrations higher than threshold limits: NONE.

CHEST FREEZER