




Use & Care Guide

Wall Oven Filler

Thank you for choosing Summit Appliance!

Designed for a seamless fit and lasting durability, your wall oven filler will keep your kitchen looking its best. Please review these care instructions to ensure years of reliable use.

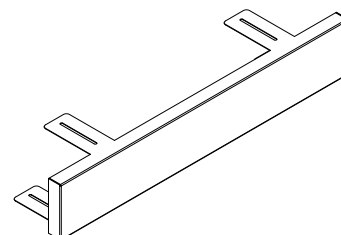

Models:

TKWO24	TKWO36
TKWO27	TKWOCUSTOM
TKWO30	

Includes:

Wall Oven Filler (1)

Installation

1. Remove all packaging materials and protective plastic film from the wall oven filler before installation.
2. Ensure the cabinet cutout is clean, level, and free of debris.
3. Position the wall oven filler in the opening. It may be installed at either the top or bottom of the cutout, depending on your application.
4. Secure using appropriate hardware (not included).
5. Check alignment to confirm a flush, finished appearance.

Care & Cleaning

- Wipe regularly with a soft cloth and warm, soapy water.
- For stubborn spots, use a non-abrasive stainless steel cleaner or a mixture of mild detergent and water.
- Always wipe in the direction of the grain to maintain the finish.
- Rinse and dry thoroughly to prevent water spots.
- Avoid abrasive pads, steel wool, chlorine-based cleaners, or harsh chemicals, as they can damage the surface.

If you need help with your installation, call our Customer Service facility at **800-932-4267 (Ext. 513)** between 9:00 AM and 5:00 PM ET or visit our website summitappliance.com/support at any time. We will do our best to answer your questions.