



BEAUTIFRIDGE™

BeautiFridge™ Cosmetics Refrigerator



User Manual

To ensure safe operation, please read this instruction manual thoroughly before use.

Write Serial No. here:

FELIX STORCH, INC.
Summit Appliance Division
ISO 9001:2015 registered
770 Garrison Avenue
Bronx, New York 10474
www.summitappliance.com

TABLE OF CONTENTS

<i>Important Safeguards</i>	3-4
<i>Disposal of Packaging</i>	5
<i>Installation Instructions</i>	6-7
<i>Before Using your BeautiFridge™</i>	6
<i>Installation of your Equipment</i>	6
<i>Reversing the Door Swing</i>	6-7
<i>Electrical Connection</i>	7
<i>Before Storing Cosmetics</i>	7
<i>Operating your BeautiFridge™</i>	8
<i>Temperature Adjustment</i>	8
<i>Defrosting</i>	8
<i>Care and Maintenance</i>	9
<i>Cleaning your BeautiFridge™</i>	9
<i>Cleaning your Tinted Door (Selected Units)</i>	9
<i>Troubleshooting</i>	10
<i>Notes</i>	11
<i>Limited Warranty</i>	12

IMPORTANT SAFEGUARDS

Your safety and the safety of others are very important.



WARNING

Follow these basic precautions to reduce the risk of fire, electrical shock, or injury when using your appliance.

- Read all instructions before using the BeautiFridge™.
- Plug into a grounded 3-prong outlet. Do not remove grounding prong, do not use an adapter, and do not use an extension cord.
- It is recommended that a separate circuit, serving only your BeautiFridge™, be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- Never clean BeautiFridge™ parts with flammable fluids. Fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Do not connect or disconnect the electric plug when your hands are wet.
- Unplug the BeautiFridge™ or disconnect the power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be performed by a qualified technician.
- Use two or more people to move and install the BeautiFridge™. Failure to do so can result in back or other injury.
- To ensure proper ventilation for your appliance, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 61°F (16°C) and below 95°F (35°C). [The unit performs best when the ambient temperature is in the range 66 – 75°F (19° – 24°C).] This unit must be installed in an area protected from the elements, such as wind, rain, water spray or drips.
- The BeautiFridge™ should not be located next to ovens, grills or other sources of high heat.
- For optimum energy conservation, locate the BeautiFridge™ in the coolest area of the room, away from heat-producing appliances and out of direct sunlight.
- The BeautiFridge™ must be installed with all electrical connections in accordance with state and local codes. A standard electrical supply (115V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local codes and ordinances, is required.
- Do not kink or pinch the power supply cord.
- If the power supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or the service agent.
- The fuse (or circuit breaker) size should be 15 amps.
- It is important for the BeautiFridge™ to be leveled in order to work properly. You may need to make several adjustments to level it.
- Although the unit has been tested at the factory, due to transit and storage, you should clean the appliance before use.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- Do not use this apparatus for other than residential purposes.

- This appliance is CFC- and HFC-free and contains small quantities of Isobutane (R600a) which is environmentally friendly, but flammable. It does not damage the ozone layer, nor does it increase the greenhouse effect. Care must be taken during transportation and setting up of the appliance that no parts of the cooling system are damaged. Leaking coolant can ignite and may damage the eyes.
- In the event of any damage:
 - Avoid open flames and sparks.
 - Disconnect from the electrical power line.
 - Air the room in which the appliance is located for several minutes.
 - Contact the Service Department for advice.
- The more coolant there is in an appliance, the larger the room it should be installed in. In the event of a leakage, if the appliance is in a small room, there is the danger of combustible gases building up. For every ounce of coolant, at least 325 cubic feet of room space is required. The amount of coolant in the appliance is stated on the data plate on the back of the appliance. It is hazardous for anyone other than an authorized service person to carry out servicing or repairs.
- Take serious care when handling, moving, and using the appliance to avoid either damaging the refrigerant tubing or increasing the risk of a leak.
- Replacing component parts and servicing should be done by factory-authorized service personnel to minimize the risk of possible ignition due to incorrect parts or improper service.
- This appliance is designed to be used in household and similar non-retail applications. Do not use this appliance for any but its intended purpose.
- This appliance is not suitable for storage of blood, pharmaceutical products and biological products.



Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous.

Before discarding your old BeautiFridge™:

- *Take off the door*
- *Leave the shelves in place so that children may not easily climb inside*
- *Contact your local authority for disposal procedures.*

– SAVE THESE INSTRUCTIONS –

DISPOSAL OF PACKAGING

- Do not allow children to play with the packaging, and dispose of plastic bags safely.
- The cardboard may be broken up or cut into smaller pieces and recycled. Any wrapping cover is made of polyethylene. The polyethylene pads and padding contain no fluorochlorichydrocarbons, and as such are most suitable for adequate recycling.

CALIFORNIA CARB/SNAP DISCLOSURE

This product uses eco-friendly hydrocarbon refrigerant and fully complies with California CARB regulations.

However, we are required by California Law to provide the following disclosure statement in every product sold in California.

"This equipment is prohibited from use in California with any refrigerants on the 'List of Prohibited Substances' for that specific end-use, in accordance with California Code of Regulations, title 17, section 95374. This disclosure statement has been reviewed and approved by Felix Storch, Inc. and Felix Storch, Inc. attests, under penalty of perjury, that these statements are true and accurate."

This product does **not** use any refrigerants on the 'List of Prohibited Substances'"

INSTALLATION INSTRUCTIONS

Before Using Your BeautiFridge™

- Remove the exterior and interior packing.
- Clean the interior surface with lukewarm water, using a soft cloth.

CAUTION: *Keep the unit upright when carrying or moving the cooler. Do not tip the unit more than 40°, otherwise the compressor will be affected and disrupt normal operation.*

- Place the refrigerator on a level and sturdy floor near a power outlet.

Installation of your Equipment

- The BeautiFridge™ is designed for free-standing installation and indoor use only.
- Be sure to leave at least 4" of clearance at the back and sides of the cooler for ventilation, and leave a space with an open angle of 160° for the door.

NOTE: Keep the cooler away from heat sources and avoid direct sunlight. Never place the cooler in a location where water can reach it or with unusually high humidity.


Reversing the Door Swing

The door of this unit has the capability of opening from either the left or right side. The door opens from the left side by default. Should you desire to reverse the opening direction, please follow these illustrations and instructions:


NOTE: You will need to tilt the fridge backward to access the lower hinge which holds the screws. Do not tilt more than 40 degrees and do not lay the fridge flat on its side.




1. Remove the top plastic hinge cover and set aside.

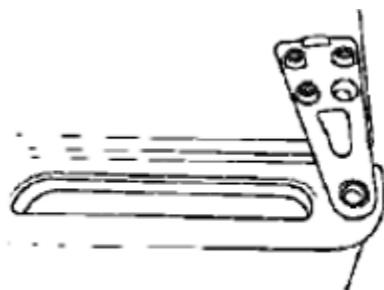

2. Unscrew the three screws from the metal bracket, and set aside. Carefully remove the door, and place it on a cushioned surface.

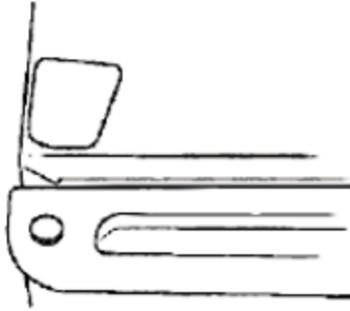

3. Remove the plastic insert on the opposite side of the refrigerator door.
4. Attach the top door bracket to this side of the refrigerator, using the screws previously removed. Replace the top plastic hinge cover.
5. Remove the adjustable foot at the bottom of the refrigerator, and set aside.

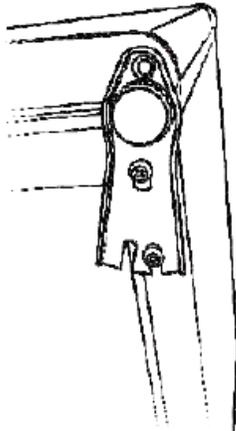

6. Unscrew the two screws holding the bottom door hinge, and carefully move it across to the opposite side.
7. Fit the door to the top and bottom hinge before fixing it into position. Care must be taken, as the door will be loose.
8. Screw the adjustable foot to the opposite side of the fridge.

Set the unit back down onto a flat, even surface. Check that the door opens and shuts properly and fully closes after completing the door reversal.

NOTE: The unit must now sit upright for at least three hours before turning the unit on.

Electrical connection

A three-hole, well-grounded socket with a fuse is required to operate this unit. Never ground the cooler through a gas pipe, tap water pipe, or the grounded wire of a single-phase power supply. The power supply should be 110 to 120 VAC / 60Hz, and requires a voltage stabilizer of over 500VA if the power supply is out of this range. Never share the same circuit with other appliances.

NOTE: If the unit is unplugged or the power supply is interrupted, wait at least five minutes before reconnecting to a power supply.

Before Storing Cosmetics

Connect the unit to a power supply. The LED will light by turning on the switch fixed on the panel inside cabinet. In 30 minutes, the temperature inside the cabinet should have cooled down, indicating normal operation.

OPERATING YOUR REFRIGERATOR

This equipment is intended for the storage and display of non-potentially-hazardous bottled or canned products only. The temperature is specifically set for the proper storage of cosmetics, including creams, serums, and oils. Always read the labeling on your beauty products for specific details on proper storage. Here are some general guidelines for storing these items:

Cosmetic	Recommended Temperature
Oils	54° - 60°F
Eye Creams and Serums	50° - 60°F
Face Masks and Creams	45° - 60°F
Pencils (Eyeliner)	Refrigerate for a few minutes prior to using them for better application texture
Lipstick	Store between 65° - 75°F; refrigerate lipstick not being currently used or used infrequently
Liquid Makeup	50° - 60°
Organic Cosmetics	50° - 60°

NOTE: Do not put too many items into the cooler at one time. Leave some space around the goods to allow cold air to circulate inside the cabinet. Keep bottled articles away from the walls of the interior to avoid freezing.

Temperature Adjustment

The BeautiFridge™ includes a digital thermostat with a temperature range of 42 to 65°F. To adjust the temperature between those points, follow the instructions below:

To see the SET POINT

The default display for your digital thermostat is the internal cabinet temperature. To view the unit's set point, push and immediately release the SET key. The display will flash, showing the set point value. If no other actions are taken in 6 seconds, the display will revert to the internal air temperature.

To change the SET POINT

While the set point value is blinking, press the UP or DOWN arrow to change the set point to your desired temperature. Press the SET button again to exit the adjustment. The display will revert to the internal air temperature.

Defrosting

- This appliance defrosts automatically during its operating cycle. The water resulting from the defrosting is collected in a drip tray near the compressor at the back where it is automatically evaporated.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

CARE AND MAINTENANCE

CAUTION: *Disconnect the power supply before performing any cleaning or maintenance.*

- Regularly wipe off any dirt, which gathers on the condenser, to maintain good ventilation.
- Sometimes the sound of water flowing will be heard from inside the unit. This is the sound of refrigerant flowing inside the pipe.
- In a very humid room, there may be condensation on the door, which can be it can be dried with a cloth.

Cleaning your BeautiFridge™

1. Turn off the power, unplug the appliance, and remove all items, including the shelf.
2. Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water. Rinse well and wipe dry with a clean soft cloth.
3. Wash the shelf with a mild detergent solution.
4. Wring excess water out of the sponge or cloth when cleaning the area near the controls, or any electrical parts.
5. Wash the outside of the cabinet with warm water and a mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

Cleaning Your Tinted Door (select units)

Models with suffix "T1" include a special low-e mirror film on the door. Use a soft, clean rubber squeegee or cotton cloth and common household-strength liquid glass cleaners such as Windex®, GlassPlus®, or a silicone cleaner/polishing compounds specifically made for window films. **Never use razor blades, scrapers, or abrasive cleaning compounds on window film products.**

- Keep the door gasket clean. The door gasket can be removed for cleaning and can be easily remounted. Putting a little talcum powder on the magnetic surface of the door gasket will prolong its service life.
- Do not touch temperature sensor inside the cabinet. This could influence the operating performance of the thermostat and the system and could cause an increase energy consumption.
- Do not to put heavy items on top of the cooler.
- The top of your cooler may get warm. Do not store heat sensitive-items on top of the cooler.
- In the case of performance issues, please ask a qualified professional person for service. Do not dismantle the cooler without prior authorization.

TROUBLESHOOTING

You can solve many common BeautiFridge™ problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling a service technician.

Problem	Possible causes	Ways to solve problem
The unit does not operate.	The plug is badly connected, or the fuse is burned out.	Unplug the power cord and re-connect the plug to the power supply, or replace the fuse.
Abnormal operation of the compressor, or the compressor makes a buzzing sound.	The power voltage is out of the rated range.	Disconnect the power supply immediately and reconnect with it after normal voltage has been supplied. It is necessary to have a voltage stabilizer in case of poor power supply.
The compressor operates too long and no frost on the surface of the evaporator	Refrigeration system is at fault (leakage or blocked).	Call for service
There is frost or ice on the walls of the inner cabinet. The internal temperature is too low, and the compressor never stops running.	The thermostat does not work.	Call for service
	The temperature setting of the thermostat is too low.	Adjust the thermostat to a lower temperature.
The internal temperature is too high, and the compressor never stops operating.	Bad heat dissipation and ventilation of condenser.	Improve the ventilation.
	Too many warm items loaded into the unit in at one time.	Remove some food/beverage so air can circulate
	The door is being opened too frequently.	Permit the unit to cool down to the thermostat temperature; prevent opening the unit during this phase.
The unit makes too much noise.	The unit is not level.	Adjust the adjustable legs.
	The fastener of the unit is loose.	Tighten the loose fastener.
	Pipes near the compressor are touching.	Carefully separate the pipes.

NOTE: All repairs must be carried out by qualified authorized personnel. Inadequate repairs may be dangerous. Never try to repair the cooler yourself.

NOTES

LIMITED WARRANTY

ONE-YEAR LIMITED WARRANTY

Within the 48 contiguous United States, for one year from the date of purchase, when this appliance is operated and maintained according to instructions attached to or furnished with the product, warrantor will pay for factory-specified parts and repair labor to correct defects in materials or workmanship. Service must be provided by a designated service company. Outside the 48 states, all parts are warranted for one year from manufacturing defects. Plastic parts, shelves and cabinets are warranted to be manufactured to commercially acceptable standards, and are not covered from damage during handling or breakage.

5-YEAR COMPRESSOR WARRANTY

1. The compressor is covered for 5 years.
2. Replacement does not include labor.

ITEMS WARRANTOR WILL NOT PAY FOR:

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace or repair fuses or to correct wiring or plumbing.
2. Service calls to repair or replace appliance light bulbs or broken shelves. Consumable parts (such as filters) are excluded from warranty coverage.
3. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by warrantor.
4. Replacement parts or repair labor costs for units operated outside the United States.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

DISCLAIMER OF IMPLIED WARRANTIES - LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR. WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.



WARNING: This product can expose you to chemicals including Nickel (Metallic) which is known to the State of California to cause cancer.

For more information go to www.P65Warnings.ca.gov

Note: Nickel is a component in all stainless steel and some other metal components.

FELIX STORCH, INC.
Summit Appliance Division
ISO 9001:2015 registered
770 Garrison Avenue
Bronx, New York 10474
www.summitappliance.com



For parts and accessory ordering,
troubleshooting and helpful hints, visit:
www.summitappliance.com/support

Printed in the USA
February 2020