



Using your ADA Adjustable Legs

The height of this icemaker can be adjusted to fit under ADA compliant counters by using the adjustable legs, provided with your unit.

NOTE: Unplug the appliance and make sure the unit is empty before adding or removing adjustable feet.

1. Carefully lay the unit onto its side, using a soft cloth to ensure the outer surface is not scratched.
2. Screw the adjustable legs into the bottom of the cabinet, using the attached bolt to secure the foot to the bottom of the cabinet.
3. Set the unit upright, and install in the appropriate location.

Turning the leg to the right will lower that side of the unit. Turning the legs to the left will raise that side of the unit. The height can be increased between $\frac{1}{2}$ " and $1 \frac{1}{2}$ ".

NOTE: In addition to these legs, your unit also includes taller 4" high legs for alternate height applications. You can change the legs as your needs require. For installation instructions, see the user manual included with this unit.