

# User's Manual

**Model SWC530LBI**

**BUILT-IN TWO-ZONE WINE CELLAR**



**SUMMIT APPLIANCES**

**Felix Storch Inc.**

**Bronx, NY 10474**

## IMPORTANT SAFETY INSTRUCTIONS

⚠WARNING⚠	To reduce the risk of fire, electrical shock, or injury when using you appliance, follow these basic precautions
<ul style="list-style-type: none"><li>·Read all instructions before using the Wine Cellar.</li><li>·<b>DANGER or WARNING:</b> Risk of child entrapment. Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous...even if they will "just sit in the garage a few days".</li><li>·<b>Before you throw away your old Wine Cellar or any appliance:</b> Remove the door. Leave the shelves in place so that children may not easily climb inside.</li><li>·Never allow children to operate, play with, or crawl inside the appliance.</li><li>· Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.</li><li>·Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.</li></ul> <p style="text-align: center;">-Save these instructions-</p>	

## INSTALLATION INSTRUCTIONS

### Before Using Your Wine Cellar

- Remove the exterior and interior packing.
- Before connecting the Wine Cellar to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Install the handle on the left side of the door.

### Installation of Your Wine Cellar

- This appliance is designed for free standing or built-in (full recessed) installation.
- Place your Wine Cellar on a floor that is strong enough to support it when it is fully loaded.  
To level your Wine Cellar, adjust the front leveling legs at the bottom of the Wine Cellar .
- Locate the Wine Cellar away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform

properly.

- Avoid locating the unit in moist areas.
- Plug the Wine Cellar into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified or an authorized products service center.

### **Reversing the Door Swing of Your Appliance**

This appliance has the capability of the door opening from either the left or right side. The unit is delivered to you with the door opening from the left side. Should you desire to reverse the opening direction, please follow the instructions below:

1. Carefully lay the wine cellar on its back. Use cushioning to protect the floor and appliance
2. With the door shut, remove the two screws holding the bottom hinge to the door.
3. Carefully lift off the door
4. Unscrew the top hinge pin and cover and move to the opposite side
5. Use the new bottom hinge provided in the plastic bag inside the wine cellar
6. Place the door back onto the wine cellar, lining up the top hinge pin
7. Connect the new bottom hinge pieces to the door and cabinet, using the screws from the opposite side and following the same placement.
8. Keep the spare hinge, should you wish to every reverse the door back.


### **OPERATING YOUR WINE CELLAR**

The Wine cellar should be placed in where the ambient temperature is between 32-90 degrees Fahrenheit (0-33°C). If the ambient temperature is above or below this range, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions may cause interior temperatures to fluctuate.

Recommended temperatures for Chilling Wine.

Red Wines:	15-18°C (58-65°F)
Dry /White Wines	9-18°C (48-57°F)
Sparkling Wine	5-9°C (40-47°F)

The above temperatures may vary slightly depending on whether or not the interior bulb is ON or OFF or whether the bottles are located on the upper/middle or lower section.

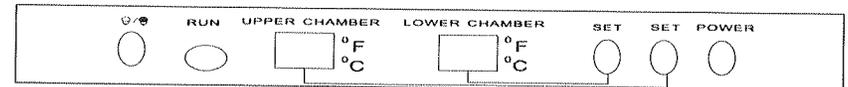

#### **ON/OFF Power**

To turn the appliance on or off, press the ON/OFF button.

### **Setting the temperature Control**

Each cooling compartment of the Wine Cellar (upper and lower) is independently controlled. To set the temperature :

Connect the power cord to a properly grounded outlet. In the event of a power interruption, all previous temperature settings are automatically erased and each compartment will default to a preset temperature setting of : 6°C (43°F) for upper compartment and 12°C (54°F) for lower compartment.

Set the desired cooling temperature by pressing the buttons adjacent to the "set upper/set lower" program. Each depression of the buttons will scroll through the available temperature settings (for each compartment) in increments of 1 degree. The temperature selected will flash in the LED display for approximately 5 seconds, then revert back to display the temperature of the internal cabinet.

**Upper compartment:** The temperature setting can be adjusted from 5°C to 10°C (41°F to 50°F).

**Lower compartment:** The temperature setting can be adjusted from 10°C to 18°C (50°F to 64°F).

To view the "set" temperature (anytime) press and hold the corresponding button for approximately 5 seconds, the "set" temperature will temporarily "flash" in the LED display for 5 seconds.

This unit has the option to display temperatures in either Celsius or Fahrenheit. To change the setting, press and hold both buttons (Set Upper/Set Lower) simultaneously for approximately 5 seconds, a prompt (beep) will sound and the blue pilot light adjacent to the 0C or 0F mode illuminates.(Some models do not offer this feature).

### **NOTE:**

If the unit is unplugged, or turned off, or if there is a power failure, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the Wine Cellar will not start.

When you use the Wine Cellar for the first time, or restart the wine Cellar after having been shut off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the LED readout. This is normal and is due to the length of the inactivation time. Once the Wine Cellar is running for a few hours everything will be back to normal.

### **Interior Light**

You can turn the interior light ON or OFF by pushing the button marked with the "bulb"

symbol . The light will be turned off automatically if it remains ON for 10 minutes. You

have to push the button marked with the "bulb" symbol . again and the light will turn

back on. For best storage of wine, keep the light off except when viewing.

## **CARE AND MAINTENANCE**

### **Cleaning Your Wine Cellar**

Turn off the power, unplug the appliance, and remove all items including shelves and racks.

- Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wash the outside cabinet with warm and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

#### **Power Failure**

- Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If your power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

#### **Vacation Time**

- Short vacations: Leave the Wine Cellar operating during vacations of less than three weeks. If you turn off the wine cellar for extended periods, leave the door slightly ajar to prevent odor building inside the appliance.

#### **Transporting your wine cellar**

If you need to move your wine cellar once the box has been discarded:

- Securely tape down all loose items (shelves) inside your appliance.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also protect the outside of the appliance with a blanket, or similar item.

#### **Energy saving Tips**

- The Wine Cellar should be located in the coolest area of the room, away from heat producing appliances, and out of the direct sunlight.

## PROBLEMS WITH YOUR WINE CELLAR

You can solve many common Wine Cellar problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

### TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Wine Cellar does not operate.	Not plugged in. The appliance is turned off. The circuit breaker has tripped or a fuse has blown
Wine Cellar is not cold enough.	Check the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly.
Turns on and off frequently.	The room temperature is hotter than normal. A large amount of contents has been added to the Wine Cellar. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work.	Not plugged in. The circuit breaker tripped or a blown fuse. The bulb has burned out. The light button is "OFF".
Vibrations.	Check to assure that the Wine Cellar is level.
The Wine Cellar seems to make too much noise.	Some noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your Wine Cellar. Contraction and expansion of the inside walls may cause popping and crackling noises. The Wine Cellar is not level.
The door will not close properly.	The Wine Cellar is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.



#### Warranty

Your SUMMIT wine cellar is warranted for one year against defects in manufacturing. The compressor (part only) additionally is warranted for an additional 5 years. Some exclusions apply, and details are on our website:

[www.summitappliance.com](http://www.summitappliance.com)

Should you need replacement parts, these may be ordered online from:

[www.summitapplianceparts.com](http://www.summitapplianceparts.com)

Our parts and service department may be reached, Monday through Friday at 718-328-8700.