



ITEM	PART NUMBER	QTY
1	GLASOB1	2
2	GLASOB7/8/9/10/11	1
3	GLASOB2/3/4/5/6	1
4	ALUPROFIL6	2
5	BESLAG14	8
6	SKIV6P	32
7	MØTRIK6RF	16
8	SKR6*16	16

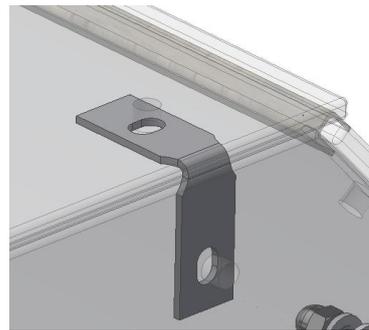

			Responsible: MF	Department: R&D	Recipient: Sales	
			Scale:	Tolerance:		
			Material:			Dimension: mm
Date	Des	App	Text			Dwg. Rev.
						04
						03
						02
120418	MP		Nyoprettelse			MAV00014 01
Page: 1 of 5		Description: Mounting Guide sneeze guard NOVA				No.: #MAV00017

CONFIDENTIAL: Property of Elcold ApS. Not to be handed over to, copied or used by third party. Two- or three dimensional reproduction of contents to be authorized by Elcold ApS.

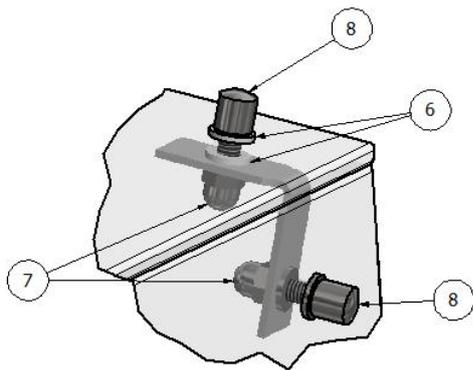

You will receive the sneeze guard in a plywood packaging



Take away the front cover of the packaging




Place the curved Front glass on a soft surface

			Responsible: MF	Department: R&D	Recipient: Sales	
			Scale:	Tolerance:		
Date	Des	App	Material:			Dimension: mm
			Text			Dwg. Rev.
						04
						03
						02
120418	MP		Nyoprettelse			MAV00014 01
Page: 2	of: 5	Description: Mounting Guide sneeze guard NOVA				No.: #MAV00017


CONFIDENTIAL: Property of Elcold ApS. Not to be handed over to, copied or used by third party. Two- or three dimensional reproduction of contents to be authorized by Elcold ApS.



Place the Side glass on a soft surface

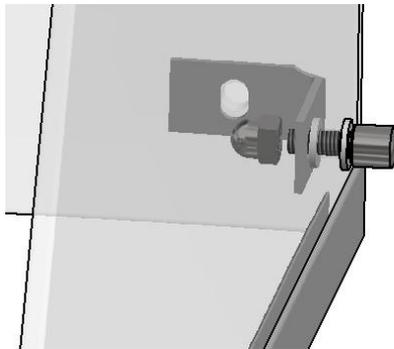


Prepare one set of fasteners for each assembly position
Mount 4 sets of fasteners for each side glass - see photo below

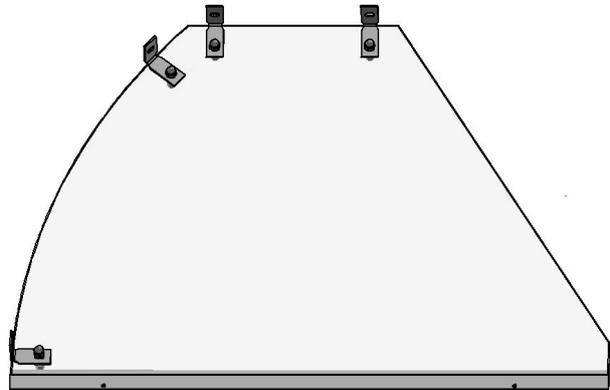

		Responsible: MF	Department: R&D	Recipient: Sales	
		Scale:	Tolerance:		
Date	Des	App	Material:	Dimension: mm	
			Text	Dwg.	Rev.
					04
					03
					02
120418	MP		Nyoprettelse	MAV00014	01
Page: 3	of: 5	Description: Mounting Guide sneeze guard NOVA			No.: #MAV00017

CONFIDENTIAL: Property of Elcold ApS. Not to be handed over to, copied or used by third party. Two- or three dimensional reproduction of contents to be authorized by Elcold ApS.

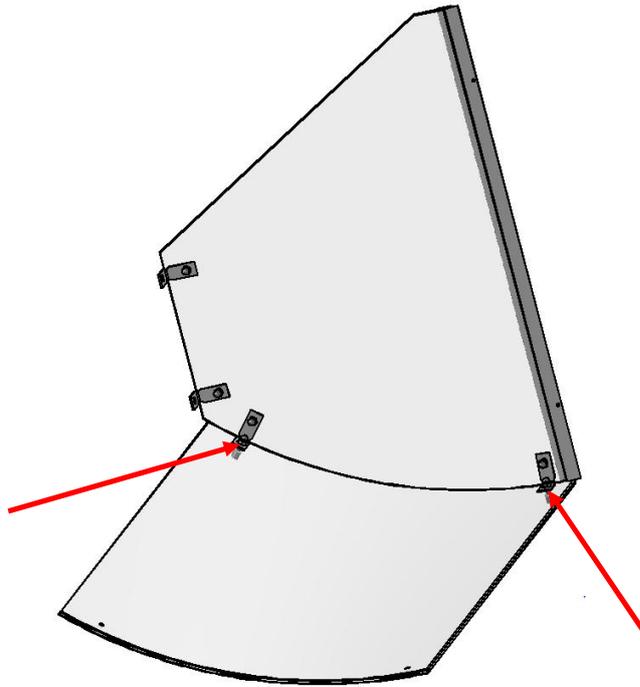


Fasten the right hand Side glass to the Front glass with 2 x screws no.6, 4 x plastic washers, 2 x nuts

Repeat and do the same with the left hand Side glass




Find the label with 8 adhesive pads
 They should be used to make distance between the different pieces of glass
 Place 2 of the pads on the top of each side glass. Place them 5 cm from the edge.
 Place the remaining 4 pads along the long side of the top glass positioned against the top of the curved glass. 2 of the pads should be placed 5 cm from the end of the glass

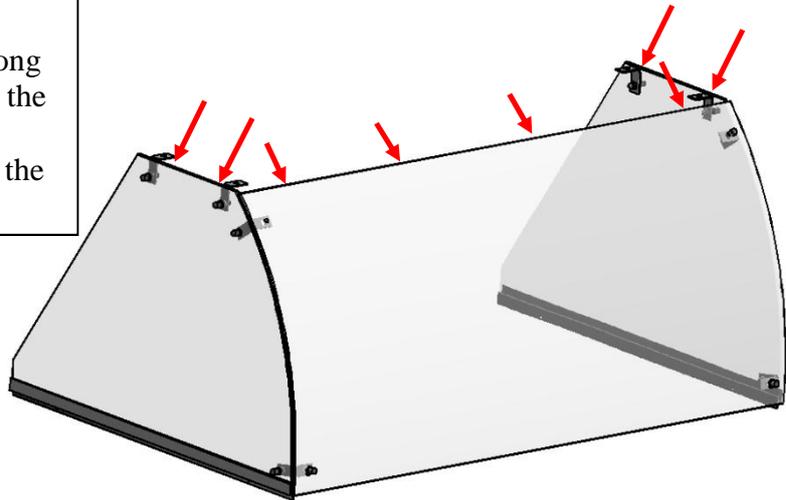


			Responsible: MF	Department: R&D	Recipient: Sales	
			Scale:	Tolerance:		
Date	Des	App	Material:			Dimension: mm
			Text			Dwg. Rev.
						04
						03
						02
120418	MP		Nyoprettelse			MAV00014 01
Page: 4 of 5		Description: Mounting Guide sneeze guard NOVA				No.: #MAV00017

CONFIDENTIAL: Property of Elcold ApS. Not to be handed over to, copied or used by third party. Two- or three dimensional reproduction of contents to be authorized by Elcold ApS.

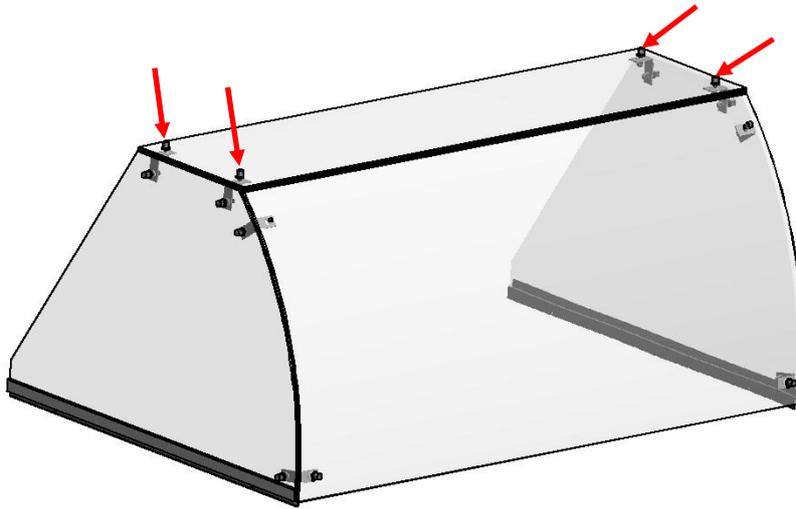

Fasten the Top glass
Use screw no.6, 4 pcs., nuts, 4 pcs. and plastic washers, 8 pcs.

The sneeze guard is ready now to install on the freezer

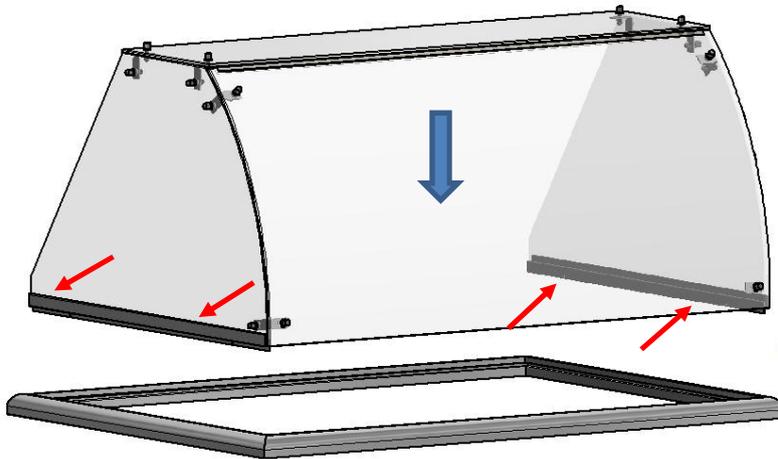

Place the sneeze guard on the freezer, press the sides to the inner side of the box, and fasten the sides to the freezer
Look at the picture

Use screw no.3, (4 pieces)

			Responsible: MF	Department: R&D	Recipient: Sales	
			Scale:	Tolerance:		
			Material:			Dimension: mm
Date	Des	App	Text			Dwg. Rev.
						04
						03
						02
120418	MP		Nyoprettelse			MAV00014 01
Page: 5 of 5		Description: Mounting Guide sneeze guard NOVA				No.: #MAV00017

CONFIDENTIAL: Property of Elcold ApS. Not to be handed over to, copied or used by third party. Two- or three dimensional reproduction of contents to be authorized by Elcold ApS.